


Superlift Remote Coding Instructions

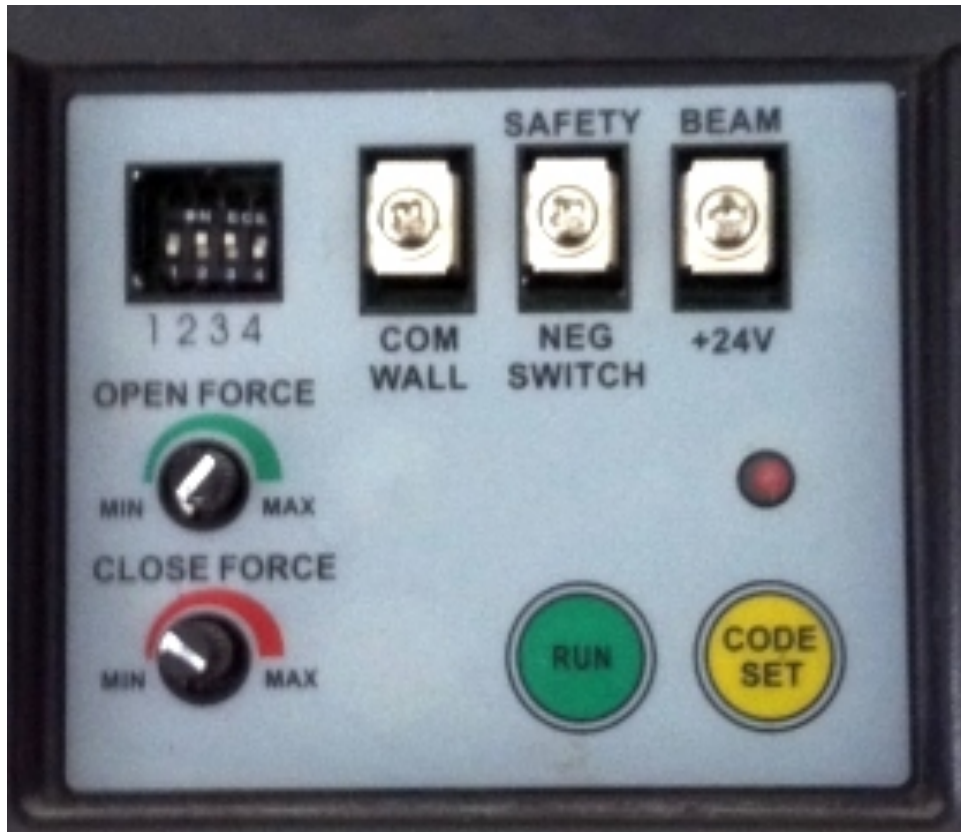

How to program your remote

1. Hinge-open the Courtesy Lamp Cover to expose the “Learn” or “Code Set” Button
2. At this stage – make sure you have your new remote with you
3. Press the "Learn" or “Code Set” Button for about 1 second. This should cause the LED to glow solid.
4. Press the number 1 button on your new remote for about 1 second – the LED indicator light will turn off

5. Press the number 1 button again for about 1 second – the LED indicator will start flashing rapidly. Once the LED indicator stops flashing, programming is complete.
6. Close the Courtesy Lamp Cover

How to delete all codes

1. Hinge open the Courtesy Lamp Cover to expose the “Learn” or “Code Set” button
2. Momentarily press the "Learn" or “Code Set” Button - LED indicator will glow solid
3. Press and hold the black "Run" Button - LED indicator will begin to flash rapidly
4. All Remote Codes will have been deleted once the LED Indicator stops flashing
5. Close the Courtesy Lamp Cover

Things to note

Please note: each of the 4 buttons on the replacement remote are independent. This is one of the benefits of this remote. What this means is that if you wanted, you could control 4 different garages with each of the buttons (all you would have to do is repeat the coding instructions, but instead of using the “number 1” button – you could use the “number 2” button – if you wanted to program the second button.